



# 1997 Chevrolet S10 Pickup

## 1997 ELECTRICAL Fuses & Circuit Breakers - Blazer, Bravada, S10 Pickup & Sonoma

Fuse/Circuit Breaker	Rating	Description	Fuse/Circuit Breaker	Rating	Description
PWR ACCY Circuit Breaker A	20 A	<ul style="list-style-type: none"> <li>Door Lock And Side Window Switch, LH</li> <li>Door Lock And Side Window Switch, RH</li> <li>Door Lock Relay</li> <li>Power Seat Actuator Assembly, LH</li> <li>Power Seat Back Lumbar Support Switch, LH</li> <li>Power Seat Back Lumbar Support Switch, RH</li> <li>Remote Control Door Lock Receiver</li> </ul>	ENG-1 Fuse 5	20 A	<ul style="list-style-type: none"> <li>Crankshaft Position Sensor (4.3 L Engine)</li> <li>Evaporative Emission Canister Purge Solenoid Valve</li> <li>Evaporative Emission Canister Vent Solenoid Valve</li> <li>Exhaust Gas Recirculation Valve (4.3 L Engine)</li> <li>Heated Oxygen Sensor, LH Front (4.3 L Engine)</li> <li>Heated Oxygen Sensor, Post-Converter (2.2 L Engine)</li> <li>Heated Oxygen Sensor, Post-Converter (4.3 L Engine)</li> <li>Heated Oxygen Sensor, Pre-Converter (4.3 L Engine)</li> <li>Heated Oxygen Sensor, RH Front (4.3 L Engine)</li> <li>Mass Air Flow Sensor (4.3 L Engine)</li> <li>Vehicle Control Module (4.3 L Engine)</li> </ul>
PWR WDO Circuit Breaker B	30 A	<ul style="list-style-type: none"> <li>Door Lock And Side Window Switch, LH</li> <li>Door Lock And Side Window Switch, RH</li> <li>Side Window Lockout Switch</li> <li>Sunroof Console</li> </ul>	HTR A/C Fuse 6	20 A	<ul style="list-style-type: none"> <li>Air Temperature Valve Electric Actuator</li> <li>Heater And A/C Controller</li> <li>Heater Controller</li> </ul>
STOP HAZ Fuse 1	20 A	<ul style="list-style-type: none"> <li>Hazard Lamp Flasher</li> <li>Seat Belts And Ignition Key And Lamps Alarm</li> <li>TCC Brake And Cruise Control Release Switch</li> </ul>	PWR AUX Fuse 7	25 A	<ul style="list-style-type: none"> <li>Auxiliary Power Outlet, LH</li> <li>Auxiliary Power Outlet, RH</li> <li>Data Link Connector</li> </ul>
CTSY Fuse 2	20 A	<ul style="list-style-type: none"> <li>Cargo Lamp</li> <li>Cigarette Lighter</li> <li>Console Courtesy Lamp, LF</li> <li>Console Courtesy Lamp, RF</li> <li>Dome Lamp</li> <li>Driver's Information Display Center</li> <li>Endgate Lock Switch</li> <li>Horn Relay</li> <li>JP Compartment Lamp</li> <li>Inside Rear View Mirror</li> <li>Interior Lamps Control Module</li> <li>Liftgate Lock Switch</li> <li>Outside Remote Control Rear View Mirror Switch</li> <li>Remote Control Door Lock Receiver</li> <li>Sunshade Mirror Lamp, LH</li> <li>Sunshade Mirror Lamp, RH</li> </ul>	RR DEF-OG Fuse 8	30 A	Rear Window Defogger Switch
PK LPS Fuse 3	20 A	<ul style="list-style-type: none"> <li>Headlamp Switch</li> <li>Transfer Case Shift Control Module</li> <li>Underhood Lamp</li> <li>Windshield Washer Pump, Rear (Utility)</li> </ul>	ECM BAT Fuse 9	20 A	<ul style="list-style-type: none"> <li>Fuel Pump Relay</li> <li>Fuel Pump Switch And Engine Oil Pressure Gauge Sensor (4.3 L Engine)</li> <li>Powertrain Control Module (2.2 L Engine)</li> <li>Vehicle Control Module (4.3 L Engine)</li> </ul>
GAUGES Fuse 4	10 A	<ul style="list-style-type: none"> <li>A/C Compressor Relay</li> <li>Daytime Running Lamps Control Module</li> <li>Daytime Running Lamps Relay</li> <li>Four Wheel Drive Indicator Switch</li> <li>Front Axle Switch</li> <li>Fuel Level Buffer Module</li> <li>Inflatable Restraint Diagnostic Energy Reserve Module</li> <li>Instrument Cluster</li> <li>Interior Lamps Control Module</li> <li>Rear Window Defogger Switch</li> <li>Remote Control Door Lock Receiver</li> <li>Seat Belts And Ignition Key And Lamps Alarm</li> <li>Transfer Case Select Switch</li> <li>Transfer Case Shift Control Module</li> </ul>	ECM IGN Fuse 10	20 A	<ul style="list-style-type: none"> <li>Crankshaft Position Sensor (4.3 L Engine)</li> <li>Electronic Ignition Control Module (Electronic Spark Control) (4.3 L Engine)</li> <li>Electronic Ignition Control Module (W/O Coil) (2.2 L Engine)</li> <li>Fuel Injector # 1 (2.2 L Engine)</li> <li>Fuel Injector # 1 (4.3 L Engine)</li> <li>Fuel Injector # 2 (2.2 L Engine)</li> <li>Fuel Injector # 2 (4.3 L Engine)</li> <li>Fuel Injector # 3 (2.2 L Engine)</li> <li>Fuel Injector # 3 (4.3 L Engine)</li> <li>Fuel Injector # 4 (2.2 L Engine)</li> <li>Fuel Injector # 4 (4.3 L Engine)</li> <li>Fuel Injector # 5 (4.3 L Engine)</li> <li>Fuel Injector # 6 (4.3 L Engine)</li> <li>Powertrain Control Module (2.2 L Engine)</li> <li>Vehicle Control Module (4.3 L Engine)</li> </ul>
			RADIO Fuse 11	20 A	<ul style="list-style-type: none"> <li>Driver's Information Display Center</li> <li>Inside Rear View Mirror</li> <li>Map/Dome Lamp Relay</li> <li>Radio</li> <li>Rear Window Wiper And Washer Switch</li> </ul>
			BRAKE Fuse 12	10 A	<ul style="list-style-type: none"> <li>Cruise Control Module</li> <li>Cruise Control Switch (Multi-Function Switch)</li> <li>Electronic Brake Control Module</li> <li>TCC/Brake And Cruise Control Release Switch</li> </ul>
			RDO BATT Fuse 13	10 A	Radio
			A/C COMP Fuse 14	10 A	A/C Compressor Relay
			DRL/FOG Fuse 15	20 A	<ul style="list-style-type: none"> <li>Daytime Running Lamps Relay</li> <li>Fog Lamp Relay</li> </ul>
			TURN R/U Fuse 16	15 A	<ul style="list-style-type: none"> <li>Backup Lamp Switch (Manual Transmission)</li> <li>Transmission Range Switch (Park/Neutral Position And Backup Lamp Switch)</li> <li>Turn Signal Lamp Flasher</li> </ul>
			WIPER Fuse 17	25 A	<ul style="list-style-type: none"> <li>Washer Control Switch (Multi-Function Switch)</li> <li>Windshield Wiper Pulse Control Module</li> <li>Wiper Control Switch (Multi-Function Switch)</li> </ul>
			Fuse 18	—	Not Used
			4WD Fuse 19	20 A	Transfer Case Shift Control Module
			CRANK Fuse 20	10 A	<ul style="list-style-type: none"> <li>Clutch Pedal Position And Cruise Control Shutoff Switch</li> <li>Inflatable Restraint Diagnostic Energy Reserve Module</li> <li>Transfer Case Shift Control Module</li> <li>Transmission Range Switch (Park/Neutral Position And Backup Lamp Switch)</li> </ul>
			Fuse 21	—	Not Used
			AIR BAG Fuse 22	10 A	<ul style="list-style-type: none"> <li>Inflatable Restraint Arming Sensor</li> <li>Inflatable Restraint Diagnostic Energy Reserve Module</li> </ul>
			ILLUM Fuse 23	10 A	<ul style="list-style-type: none"> <li>Automatic Transmission Position Indicator Lamp</li> <li>Driver's Information Display Center</li> <li>Endgate Window Release Switch</li> <li>Fog Lamp Switch</li> <li>Four Wheel Drive Indicator Switch</li> <li>Heater And A/C Controller</li> <li>Heater Controller</li> <li>Instrument Cluster</li> <li>Liftgate Window Release Switch</li> <li>Radio</li> <li>Rear Window Defogger Switch</li> <li>Rear Window Wiper And Washer Switch</li> <li>Seat Belts And Ignition Key And Lamps Alarm</li> </ul>
			TRANS Fuse 24	10 A	<ul style="list-style-type: none"> <li>Automatic Transmission</li> <li>Instrument Cluster</li> <li>Park Pawl Actuator (Brake Transmission Shift Interlock Solenoid)</li> </ul>

G00098593

**Fig. 2: Fuse Block Identification**  
Courtesy of GENERAL MOTORS CORP.